FUJIDENZO

WATER DISPENSER

USER MANUAL

Model:

FWD1331W
FWD1331B

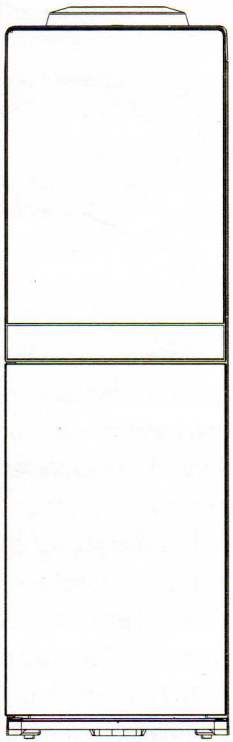

Please read the manual carefully before operating your water dispenser. Retain it for future reference.

DIRECTORY

A:SAFETY INSTRUCTION..... 1
B:PART NAME 2
C:FUNCTION INTRODUCTION..... 3
D:OPERATION INSTRUCTION..... 3
E:CAUTION..... 3
F: TROUBLE SHOOTING 5
G:CLEANING 5
H: MACHINEINSTALLATION 6

The packaging material used is recyclable; we recommend that you separate plastic, paper and cardboard and give them to recycling companies. To help preserve the environment, the refrigerant used in this product is R134a (Hydrofluorocarbon -HFC), which does not affect the ozone layer and has little impact on the greenhouse effect. According to WEEE (Waste of Electrical and Electronic Equipment) guidelines, waste from electrical and electronic devices should be collected separately. If you need to dispose of this appliance in the future, do NOT throw it away with the rest of your domestic garbage. Instead, please take the appliance to the nearest WEEE collection point, where available.

A: SAFETY INSTRUCTION

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play children without with the appliance.
   Cleaning and user maintenance shall not be made by children without superbision.
2. This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. The appliance must not be cleaned by a water jet.
5. The appliance is suitable for indoor use only.
6. WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
7. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
8. WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
9. This product is not recommended to use in areas above 1,500m altitude.
10. It is recommended to use bottled pure water. If you use hard water, may lead to hot pot furring or detonation tank or pipeline risk. If you need cleaning tube, remove scale, need to find a professional institutions and professional operation.
11. Rated voltage: 230V~ 60Hz.
12. WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.
13. WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
14. In order to make sure the machine can be used normally, please keep it stand still for 24 hours before powering up.

B : PART NAME

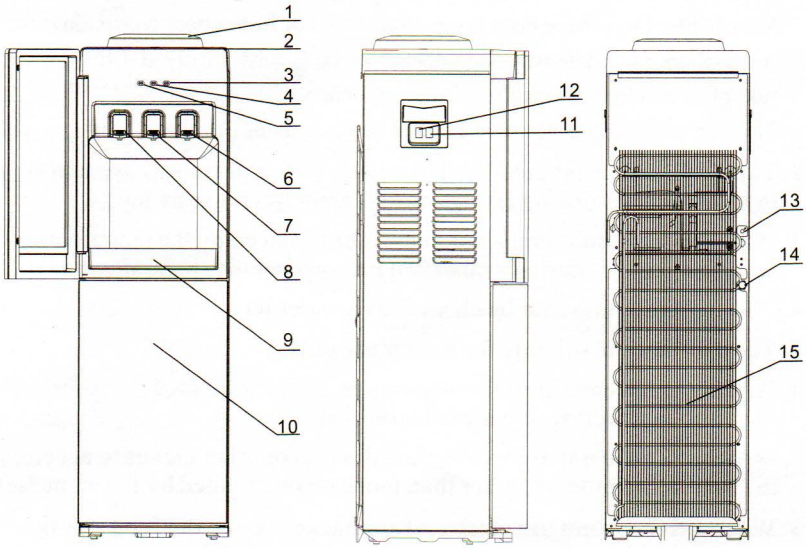

(FRONT) (SIDE) (REAR)

No.	PART NAME	No.	PART NAME
1	bottle supporter	9	water collector
2	top cover	10	door
3	cooling pilot lamp	11	heating switch
4	heating pilot lamp	12	cooling switch
5	power pilot lamp	13	power supply cord
6	tap of cold water	14	outlet of hot water
7	tap of normal water	15	condenser
8	tap of hot water		

NOTE:

This machine is suitable for bottle of 3 or 5 gallons.

C: FUNCTION INTRODUCTION

1. This machine is reliable for its safety & durability.
2. This machine can satisfy the need of tea & coffee . It must be used indoor only.
3. With adoption of distinctive thermal isolation technology, this machine can minimize thermal exchange between hot & cold water.
4. Warning:Do not damage the refrigerant circuit.

D: OPERATION INSTRUCTION

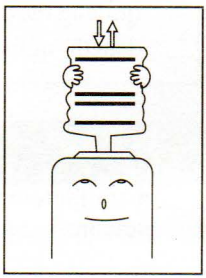

1. Tear the label from the bottle.
2. Vertically insert the bottle into the bottle supporter on top of the machine. Do not plug the power cord or push the heating switch until water runs out from the tap of hot water.
3. Insert the plug to socket, then turn on the switch. Indicators light up accordingly once the machine works.
4. Vertically pull out the bottle by two hands when the bottle is empty, then replace it with another bottle of water.
5. This appliance should work under environment of temp from 10~43°C humidity ≤90%.
6. This appliance is not suitable for installation in an area where a water jet could be used.

E: CAUTION

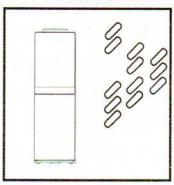

1. Keep this machine in place of dryness and avoid direct sunshine. Rearward of the machine should be at least 25cm far from the wall. Never put the machine on paper or foam, which may store water then cause creepage. Never put anything flammable beside this machine.

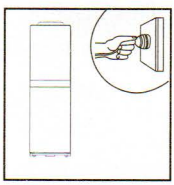

2. To avoid damage to the machine,do not plug the power cord or push the red switch until water runs out from the tap of hot water.

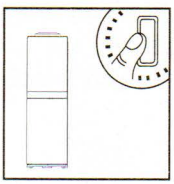

3. In case hot (or cold) water is not needed for a long time, turn off the switch accordingly to save power.

4. In case not to use this machine for a long time, turn off the switches, then pull the plug out from socket and drain the remaining water through draining outlet.

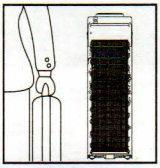

5. Never use organic liquid to clean the machine. Strictly prohibit splashing water to the unit.

6. Never turn on (off) the machine by plugging the plug to (pulling the plug out from) the socket. Never increase the length of the power supply cord to avoid fire.

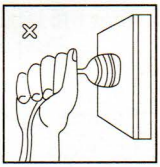

7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

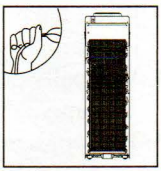

8. Never turn the machine upside down or lean it more than 45°.

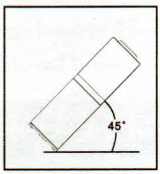

9. When the machine is under the ice point and blocked by ice, the cooling switch must be closed for 4 hours before turning it on again to continue its operation.

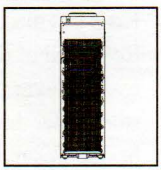

10. This machine should not be turned on until 3 minutes later after turning off the power switch.

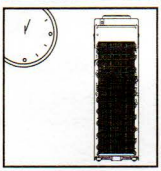

F: TROUBLE SHOOTING

Please check the follows before having the machine repaired.

PROBLEMS	no hot or cold water	no water running out from taps	leakage from bottle supporter	noisy operation
POSSIBLE CAUSES	1. over consumption of hot or cold water in short time 2. no power supply	1.empty bottle 2.inlet of bottle suporter blocked by bottle seal	broken bottle	not placid installation
ELIMINATION	1. just wait a moment, then hot or cold water is available again. 2. connect plug to socket, turn on the heating or cooling switch.	1.replace it with another one 2.clean out wasted paper & bottle seal, install bottle again.	replace it with a new bottle	place the machine on placid & solid surface

G: CLEANING

To avoid accident, cut off the power supply before operation according to the following instruction.

1. The machine had been disinfected before departed from factory. Cleaning the dispenser prior to installing a full bottle of water for the first time.

2. **Cleaning and draining instruction:**
   - ❶ Before cleaning, make sure the power switch in the ***O(off)*** position and unplug the water dispenser.
   - ❷ Vertically insert the bottle into the supporter on top of the machine.
   - ❸ Open the taps, let about 1 liter water flows into a container.
   - ❹ Removed the water bottle from the dispenser.
   - ❺ Place a large bucket beneath the drain outlet. Remove the drain cover and allow water to drain.
   - ❻ After draining, replace the drain cover and you can use the machine. **Attention:** The dispenser heats water to a temperature of approximately 85°C. It can cause severe burns. Please operate it carefully.

3. **Sanitizing**
   The machine should be disinfected with the disinfectant separately bought from drugstore or marketplace according to the instruction manual of the disinfectant and then clean it with water(see **cleaning and draining instruction**).Generally this should be done every three months.

4. **To Remove Mineral Deposits:**
Mix 4 liters water with 200g citric acid crystals, inject into the machine and make sure the water can flow out of the hot water tap. Switch on the power and heat it about 10 minutes, 30 minutes later, drain off the liquor and clean it with water for two or three times. Generally this should be done every six months.
Never disassemble this machine by yourself to avoid danger from damaging machine.

H: MACHINE INSTALLATION

1. Use the screw to fix the bracket on the hole of the middle bottom of the water dispenser.
2. Make a hole on the floor's (or the desk's) surface where the water dispenser will be installed.
3. Fix the bracket on the floor by screw tightly.
4. Tighten the screw.

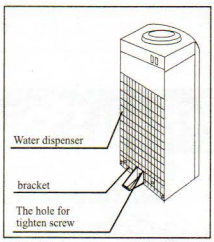

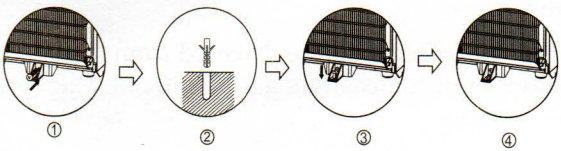

WARNING! To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

5. The machine must always be grounded. Look for a green-yellow wire found at the back of the water dispenser and connect it to the ground. Please seek assistance to a professional electrician or any qualified personnel to do so.